

# INSTALLATION INSTRUCTIONS

## SuperSorb® Carbon Filter Pads

**Fryer type:** Frymaster 1814/Dean SCFS

**Pad type:** SuperSorb® Carbon Pad F-69 (Pad size: 15.875" × 18.875" / 40.32 × 47.94 cm)




### GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Carbon Pad has always to be placed into the pan with "bumpy side" up.
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.



### STEP 1

Open the fryer doors and pull the filter pan out. Be sure filter pan is clean and dry. Place the screen on the bottom of the pan. The holes of the screen should line up with the posts of the bottom of the pan.

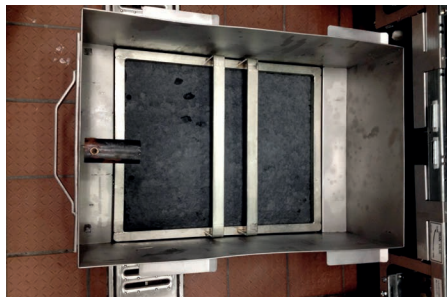

### STEP 2

Insert the F-69 Carbon Pad into the pan with the bumpy side up (smooth side down).



### STEP 3

Insert the existing hold down ring and press it firmly into place. Place the crumb catcher on top of the hold down ring.



### STEP 4

Once filter pan has cooled from first filtration, scrape crumb debris off the Carbon Pad. Removing crumb debris will improve oil return to fryer.