


INSTALLATION INSTRUCTIONS

SuperSorb® Carbon Filter Pads

Fryer type: Frymaster (Built-In) FootPrint Pro Filtration System

Pad type: SuperSorb® Carbon Pad F-33 or F-54 (Pad size inch: 14.75 × 22 / 14.125 × 21)
(Pad size cm: 37.46 × 55.88 / 35.877 × 53.34)

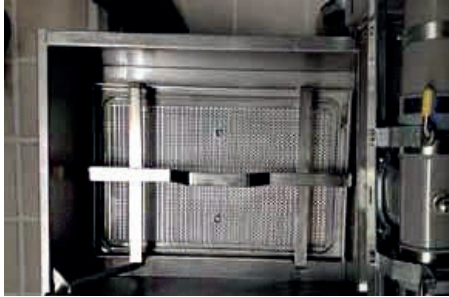

GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Carbon Pad has always to be placed into the pan with "bumpy side" up.
- O-Rings (3) on frying oil return valve need to be checked every 3–4 months (worn or missing O-Rings have a negative effect on oil pumping back through the Carbon Pad).
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.



STEP 1

Open the fryer doors and pull the filter pan out. Remove weight ring, but leave the screen in place at the bottom of the well.



STEP 2

Insert the F-33 or F-54 Carbon Pad into the pan with the bumpy side up. Be sure the Carbon Pad is centered over the well.



STEP 3

Insert the new Frymaster hold down bar, 810-2909 as shown, or 810-3946 Hold down ring and press it firmly into place.



STEP 4

Insert crumb catcher.



STEP 5

Remember to scrape the crumbs off the Carbon Pad for multiple fryer filtrations.