

# INSTALLATION INSTRUCTIONS

## SuperSorb® Carbon Filter Pads

**Fryer type:** Pitco (Models BK-SSHLV and BK-SELV)

**Pad type:** SuperSorb® Carbon Pad F-24 (Pad size: 11.25" × 19.16" / 28.58 × 48.58 cm)



### GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Carbon Pad has always to be placed into the pan with the "rough-bumpy side" up.
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.




### STEP 1

Thoroughly clean and dry drawer pan, support screen, and hold down bar.




### STEP 2

Be sure to clean and dry the strainer cap.

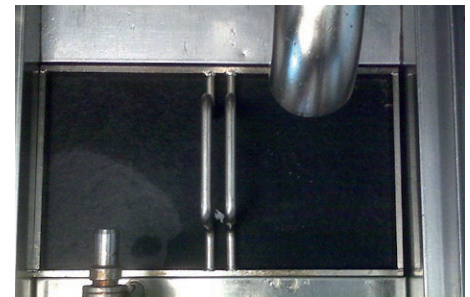

### STEP 3

Install the F-24 Carbon Pad on top of support screen with rough-bumpy side up, smooth side down.

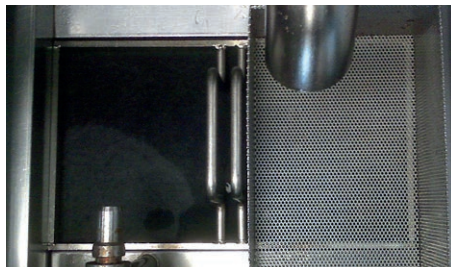

### STEP 4

Place hold down bar on Carbon Pad and next insert crumb basket.



### STEP 5

When needed, remove excess crumb debris after allowing the filter pan to cool. Use the scraper tool while Carbon Pad is still positioned in pan. Removing crumb debris will help oil flow back to the fryer vats.