

# INSTALLATION INSTRUCTIONS

## SuperSorb® Carbon Filter Pads



### GENERAL INFORMATION

Make sure the filter-pan is clean and dry.

Always wear personal protective equipment when the fry pan is hot.

Refer to the fryer operation manual.



### USING THE CARBON PAD

Carbon Pad to be placed into the pan with **bumpy side up**.

Please do not use filter-powders.

Carbon Pad must be changed daily.

In case of heavy built up, Carbon Pad can be scraped off debris.


### FRYER MAINTENANCE

Check O-Rings (when present) on frying oil return pipe. (refer to fryer operation manual)

Clean strainer cap regularly (when present)

### DISPOSAL

Carbon Pads can be disposed of as regular waste.

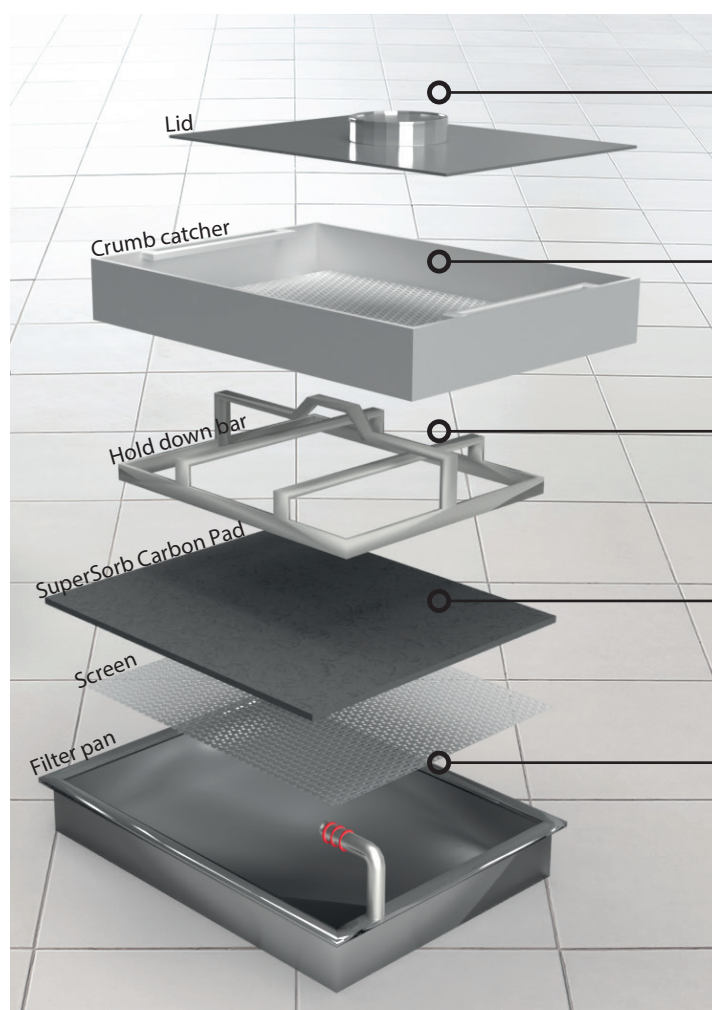

#### STEP 5

Position the lid back on the fryer-pan (if applicable) and re-position the filter pan back into the fryer.

#### STEP 4

Place the crumb catcher inside the filter pan.

#### STEP 3

Insert the hold-down bar on top to the Carbon Pad.

#### STEP 2

Insert the Carbon Pad into the filter pan with **bumpy side up**.

#### STEP 1

Remove filter-pan from fryer. Place screen on the bottom of the empty filter pan (if present)