


# INSTALLATION INSTRUCTIONS

## SuperSorb® Carbon Envelope

**Fryer type:** Ultrafryer  
**Pad type:** SuperSorb® Carbon Envelope F-88 17 5/8" × 19 1/8"

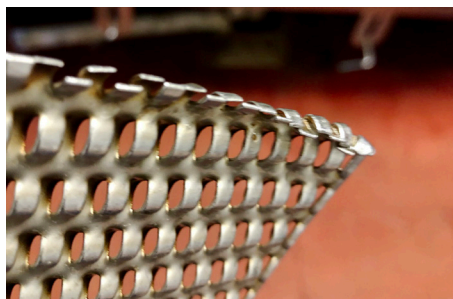

### GENERAL INFORMATION

- Support screen should be inspected daily for bent edges and corners.
- To fix, use pliers to bend back into a flat surface.
- This will minimize the filter from tearing.



### STEP 1

Remove the white paper filter. Reuse the stainless steel arm or tube.



### STEP 2

Please be sure all component filter parts including filter pan are clean and dry.



### STEP 3

Insert support screen into our Carbon Envelope with face down and paper side facing up.




### STEP 4

Flip over and secure sealing flap over the threaded coupler. Slide sealing bar over the paper sealing flap (must be used).



### STEP 5

Next secure filter assembly with stand pipe and screw tightly over the sealing flap and Carbon Pad side.

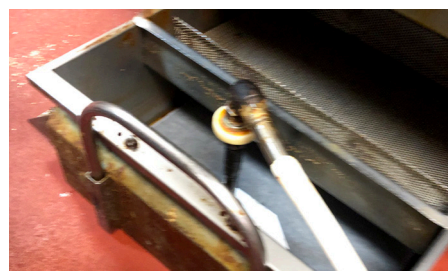

### STEP 6

Lastly connect stand pipe quick connection to suction hose.