

INSTALLATION INSTRUCTIONS

SuperSorb® CarbonPad

Fryer type: Frymaster Oil Conserving Fryer OCF (FPGL, FPEL, and FQ)
Pad type: SuperSorb® Carbon Pad F-23LV




GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- F-23LV has to always be placed with the white pleated side facing up.
- O-Rings must be checked frequently and changed every 3-4 months.
- Pipe connections must always be kept clean to reduce oil build up.
- Frymaster OCF filter pan has a pipe connection which uses 2 O-Rings, part number 816-0596.
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad F-23LV.
- Always wear protective apparel or refer to your companies OPS.



STEP 1

Place the screen on the bottom of the pan.
 The holes of the screen should line up with the posts on the bottom of the pan.

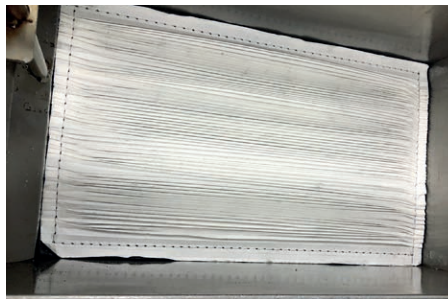

STEP 2

Insert the F-23LV with the white pleated side facing up.



STEP 3

Insert the existing hold down ring and press it firmly into place.



STEP 4

Place the crumb catcher on top of the hold down ring.