

INSTALLATION INSTRUCTIONS

SuperSorb® Carbon Filter Pads

Fryer type: Pitco P14/P18 Portable Filter Machine

Pad type: SuperSorb® Carbon Pad F-94 (Pad size: 13.37" × 23.87" / 33.95 × 60.63 cm – used for P14 model)
(Pad size: 17.5" × 27.875" / 45.45 × 70.8 cm – used for P18 model)



GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Carbon Pad has always to be placed into the pan with "bumpy side" up.
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.




STEP 1

Be sure the filter pan is completely dried of water.



STEP 2

The Support Wire Grid must be centered so there is equal space from the front and the back of the filter pan.

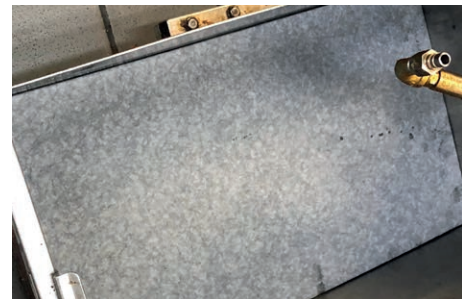

STEP 3

Place Carbon Pad's bumpy side up, smooth side down in the filter pan.



STEP 4

Clamp Hold Down Bar and front of filter pan.



STEP 5

Securly connect hoses with quick disconnects.



STEP 6

For heavy crumbs and multiple fryer filtering, after the machine has cooled, remove crumb and flour debris using a spatula or other scraper tool. Oil flow will be improved for additional use.