

# INSTALLATION INSTRUCTIONS


## SuperSorb® Carbon Filter Pads

**Fryer type:** Pitco Solstice Built-In Filtration System  
**Pad type:** SuperSorb® Carbon Pad F-95



### GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Carbon Pad has always to be placed into the pan with "bumpy side" up.
- O-Rings should be replaced once a year.
- The Pitco Solstice Built-In Filter Machine needs to be adapted to use FILTROX (Filtercorp) Unifit Adapter Kit.
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.

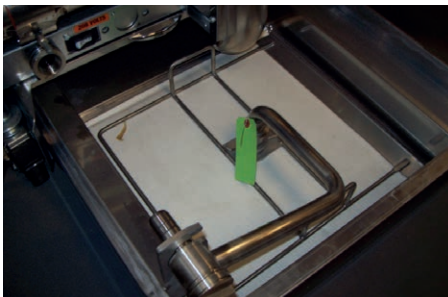

### STEP 1

In the center of the filtering pan, there is a Pitco Paper holder that must be removed. Reuse the stainless steel arm or tube (marked with a green tag in the photo above).



### STEP 2

After the Pitco Paper holder has been removed, insert the Carbon Pad rough-bumpy side facing out, into the F-95 Adapter holder. Close the hold down bar and clamp into place.



### STEP 3

Connect the Pitco stainless steel arm to the FILTROX (Filtercorp) Unifit Adapter.



### STEP 4

Throughout the filtering process it will be necessary to lift the Carbon Pad adapter and scrape the crumb debris off using a spatula or utensil. This should be done after the unit has cooled off.



### STEP 5

Preventative maintenance includes replacing the O-ring which is located inside the pipe opening usually once a year. Pitco Part Number is 60068301.