

INSTALLATION INSTRUCTIONS

SuperSorb® Carbon Filter Pads

Fryer type: Prince Castle 108 Portable Filter Machine
Pad type: SuperSorb® Carbon Pad




GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Carbon Pad has always to be placed into the pan with "bumpy side" out.
- The Prince Castle 108 is a portable filter machine. With a unifit kit, it can easily be converted to use the Carbon Pads.
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.



STEP 1

Assemble the dairy fitting to the elbow and then assemble the elbow to the flex hose. The flex hose can then be assembled to the unifit adapter.

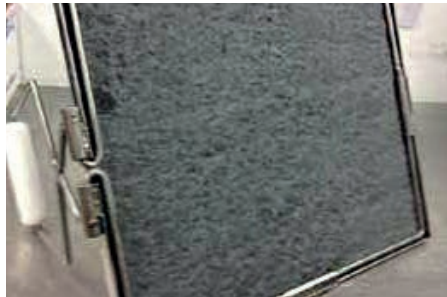

STEP 2

Open up the unifit adapter by opening the clips that go around the unit. Then insert the Carbon Pad with the smooth side against the screen (bumpy side facing out).



STEP 3

Insert the dairy fitting into the inlet side of the pump and screw the nut until hand tight. Follow the normal filtering procedures form here.