

# INSTALLATION INSTRUCTIONS

## SuperSorb® Envelope


**Fryer type:** Pitco Solstice & ROV (Built-In) Filtration System

**Pad type:** SuperSorb® Envelope F-92, F-98 & F-99 (Pad size inch: 14.25 × 19.25 / 18.5 × 18 / 9.875 × 18.75)  
(Pad size cm: 36.19 × 48.85 / 46.9 × 45.72 / 25.082 × 47.625)




### GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Preventative maintenance includes replacing the O-Ring which is located inside the pipe opening usually once a year.
- O-Rings in good condition help create a tight seal to the pipe arm and SuperSorb Envelope Filter.
- Check the Pitco Strainer Cap for any particle bypass and clean it daily.
- Always wear protective apparel or refer to your companies OPS.

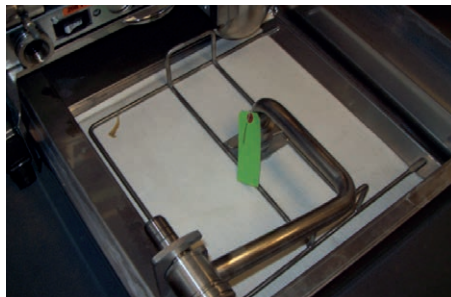

### STEP 1

Remove the white paper filter. Reuse the stainless steel arm or tube (marked with a green tag in the photo above).

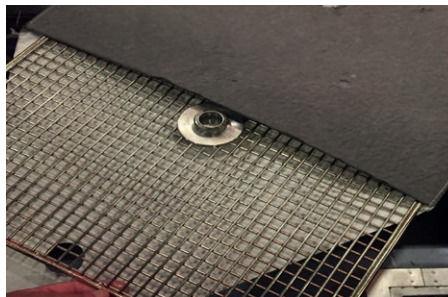

### STEP 2

Insert the wire screen into the SuperSorb® Envelope with the center screw facing upward.



### STEP 3

Close sealing flap over the center screw.



### STEP 4

Secure by tightening center wingnut.



### STEP 5

For Solstice, position pipe arm over the center wingnut and push down firmly.



### STEP 6

For ROV, connect pipe arm and sealer bar over screw coupler, fasten tightly.