


INSTALLATION INSTRUCTIONS


SuperSorb® Carbon Filter Pads

Fryer type: Henny Penny Evolution Fryer
Pad type: SuperSorb® Carbon Pad F-24 (Pad size: 11.25" × 19.16" / 28.58 × 48.58 cm)

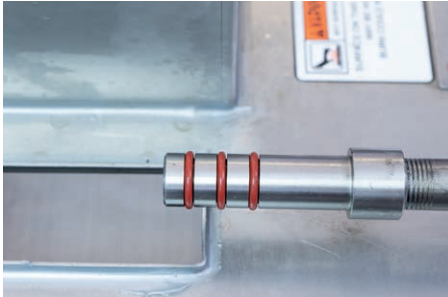


GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- Carbon Pad has always to be placed into the pan with "bumpy side" up.
- O-Rings (3) on frying oil return valve need to be checked every 3–4 months (worn or missing O-Rings have a negative effect on oil pumping back through the Carbon Pad) .
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.

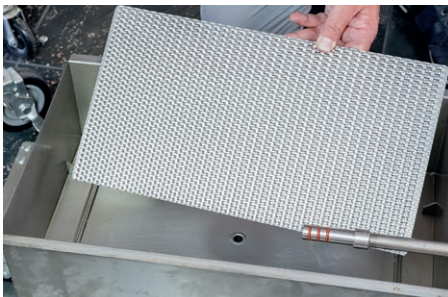

STEP 1

Locate the filter pan and make sure it is clean and dry. Place screen on the bottom of the empty filter-pan.

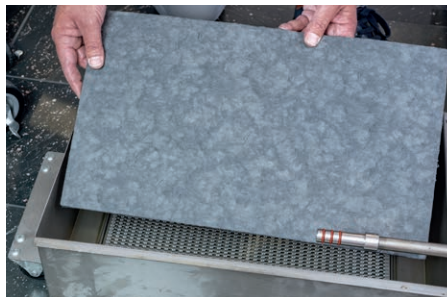


STEP 2

Insert the Carbon Pad into the filter-pan with bumpy side up. If you have trouble fitting the Pad correctly, please contact your local supplier.




STEP 3

Insert the hold-down-ring on the Carbon Pad and press it firmly into place.

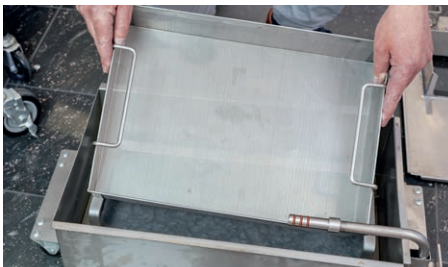

STEP 4

Place the crumb catcher on top of the hold-down-ring .

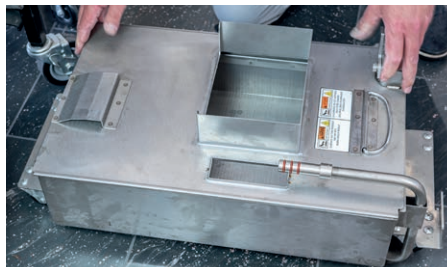

STEP 5

Position the lid back on the filter-pan and reposition the filter-pan back into the fryer.