

INSTALLATION INSTRUCTIONS

SuperSorb® Carbon Filter Pads

Fryer type: Henny Penny Evolution Elite
Pad type: SuperSorb® Carbon Pad F-23LV



GENERAL INFORMATION

- Make sure the filter-pan is clean and dry.
- The F-23LV has to be placed with the white pleated side facing up.
- Henny Penny Elite filter pan has a pipe connection which uses 3 O-Rings, part number 86349.
- O-Rings must be checked frequently and changed once a year.
- Pipe connections must always be kept clean to reduce oil build up.
- Please do not use any filter-powders in addition to the SuperSorb Carbon Pad.
- Always wear protective apparel or refer to your companies OPS.




STEP 1

Before assembling the filter pan unit, be sure to clean and dry any water in the pan.



STEP 2

Place the support screen in the center of the pan.

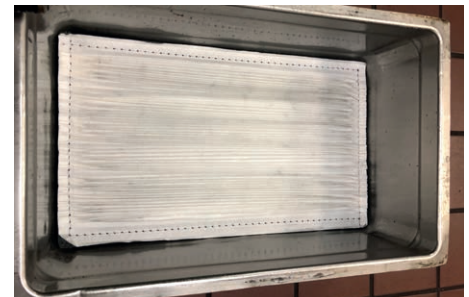

STEP 3

Insert the F-23LV with the white pleated side facing up.



STEP 4

Insert the existing hold down ring and press it firmly into place.



STEP 5

Place the crumb batcher on top of the hold down ring.