

INSTALLATION INSTRUCTIONS

SuperSorb® Carbon Envelope



GENERAL INFORMATION

Make sure the filter-pan is clean and dry.

Always wear personal protective equipment when the fry pan is hot.

Refer to the fryer operation manual.



USING THE CARBON ENVELOPE

Please do not use filter-powders.

Carbon Envelope must be changed daily.

In case of heavy built up, Carbon Pad can be scraped off debris.

FRYER MAINTENANCE


Check O-Rings (when present) on frying oil return pipe. (refer to fryer operation manual)

Clean strainer cap regularly (when present)

Henny Penny Fryer Construction Example

DISPOSAL

Carbon Envelope can be disposed of as regular waste.

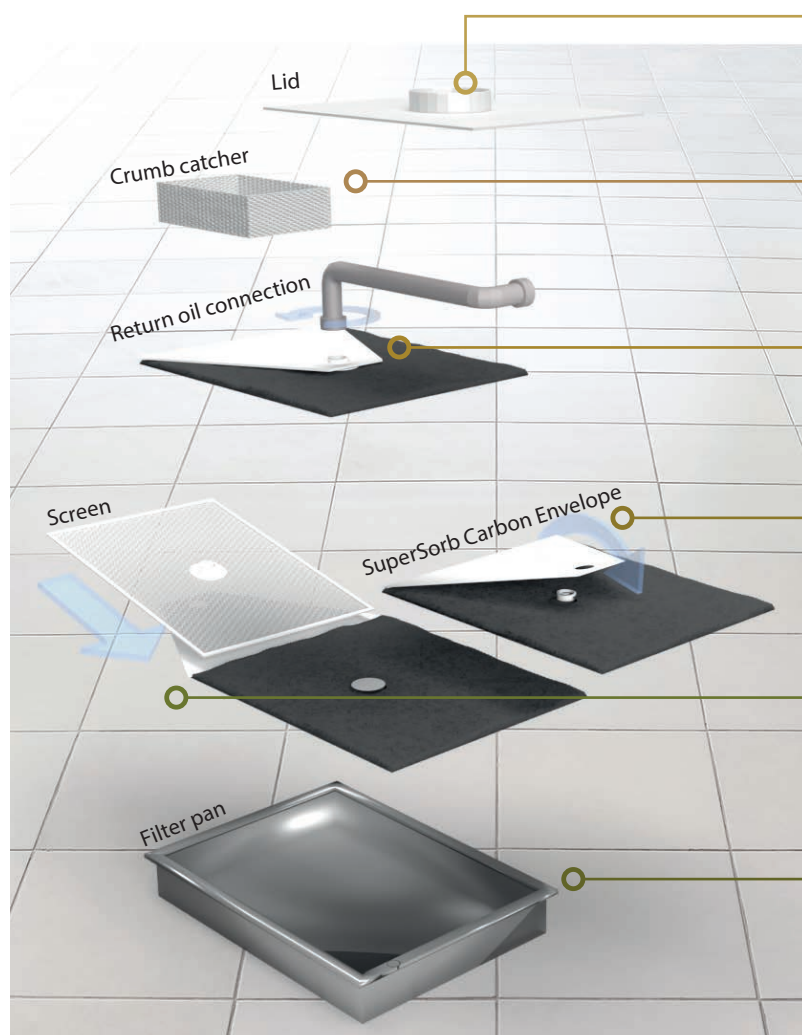

STEP 6

Position the lid back on the filter pan (if applicable) and re-position the filter pan into the fryer.

STEP 5

Place the crumb catcher into the filter pan (when present)

STEP 4

Connect stand pipe tube with filter screen assembly.

STEP 3

Fold paper flap from the envelope over the return connection.

STEP 2

Insert the metal screen inside the Carbon Envelope.

STEP 1

Remove filter-pan from fryer.